



Standard Divert Cross-Transfer

Motorized Roller Conveyor

I/O Configuration

Divert Zone: Input 1, Output 1

Belt Motor (Left/Right): Output 6, Output 7

Belt Motor (Up/Down): Output 4, Output 5